Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

INSTALLATION
OWNER'S

CookTek

CookTek Cooktop

**Models MC1800, M
MCD2500, MC3
MC3500, MCD3
MCD2502F, MC25
MC3002F, MCD3
MCD3002S, MC35
MC3502S, MCD35
MWDG1800, MWG
MWG3000, MWDG
MWDG3500, M
MWG50**

CookTek Induction Systems, LLC

Toll Free: +1 (888) COOKTEK
Toll Free Fax: +1 (888) COOKFAX
Phone: +1 (312) 563-9600
Fax: +1 (312) 432-6220

www.cooktek.com
customerservice@cooktek.com

CookTek Inductio

Toll Free: +1 (8
Toll Free Fax: +1
Phone: +1 (31
Fax: +1 (312

www.cook
customerservice

102922

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

PREPARING YOUR COOKTEK COOKTOP FOR USE

Before operating your cooktop, do the following:

- Remove all packing material and save for subsequent shipment or in case of concealed shipping damage.
- Place the unit on a dry, level, hard, stable, and non-flammable surface.
- Keep unit away from other heat sources and allow at least two (2) inches clearance for air circulation at sides, front and rear of the unit. If either the air intake or exhaust outlet is blocked, the internal temperature will rise, causing an error code to occur.

Grounding Instructions:

The cooktop must be properly grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing a safe path for the electric current. The cooktop has a power cord with a 3-prong grounding plug, which must be used in a compatible and properly grounded outlet. It is the owner's responsibility to replace any 2-prong wal loutlet with a properly grounded 3-prong wall receptacle.

For your safety, never cut, remove, or disable the electrical (ground) connection from the plug. Never use an adapter plug or an extension cord with the cooktop.

WARNING: Electric shock can result from an improperly grounded plug. Please consult a qualified electrician if you have any questions about these grounding instructions.

Before you begin:

Some units may come equipped with a removable IEC power cord. Please make sure that this power cord is firmly attached to your CookTek unit BEFORE plugging the unit into the power receptacle and before attempting operation.

ELECTRICAL INSTALLATION REQUIREMENTS*

Every installation site has different electrical wiring. Because many different local codes exist, it is the Owner and Installer's responsibility to comply with those codes. CookTek is not responsible for any consequential damages as a result of failure to comply with installation requirements.

- Read all installation instructions carefully before starting installation.
- Remove cooktop carefully from carton.
- Remove all loose packaging and accessories and save for subsequent shipment or in case of concealed shipping damage.
- It is the responsibility of the installer to comply with all federal, state and local codes.
- Any installation not matching the specifications discussed in this manual automatically voids the product's warranty.
- CookTek recmmends that a dedicated electrical line be used for each cooktop installed. Electrical circuits should not be shared with any other electrical equipment.

- Não toque na placa de cerâmica (no cimo
da sua utilização. O calor emitido pelo tab
de cerâmica, fazendo com que esta fique
- A assistência técnica deste produto só poc
assistência técnica autorizado ou por pess
unidade nem efectuar assistência técnica
referentes à assistência técnica, por favor
pelo telefone 1-312-563-9600.
- O aparelho deve estar ligado à terra. Ligu
correctamente ligada à terra. Antes de fun
instruções relativas à ligação à terra e os
na Página 3 deste folheto. Não utilize um

SI

Antes de utilizar el anafe (cooktop), realice lo

- Retire todo el material de embalaje.
- Coloque la unidad sobre una superficie se
inflamable.
- Mantenga la unidad alejada de otras fuent
menos 5 cm para que el aire circule por lo
posterior de la unidad.

Por su seguridad, nunca corte, quite ni inutilic
enchufe. No utilice nunca el anafe con un enc
prolongador.

**ADVERTENCIA: Se puede producir un cho
conectado a tierra de manera incorrecta. S
con las instrucciones de conexión a tierra,
electricista cualificado.**

Antes de comenzar:

Asegúrese de que el cable eléctrico está unid
ANTES de conectar la unidad a la electricidad

- No toque la placa cerámica (situada en la
inmediatamente después de utilizarla. El c
placa cerámica y hará que ésta se caliente
- La revisión de este producto únicamente p
mantenimiento autorizado o el personal de
ni realizar ninguna labor de mantenimiento
mantenimiento, póngase en contacto con
9600.
- Este aparato se debe conectar a tierra. En
conectada a tierra de manera adecuada. A
instrucciones de conexión a tierra y los "R
de la página 3 de este folleto. No utilice ca

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

Dla bezpieczeństwa użytkownika nie wolno nigdy przecinać, wyjmować ani wyłączać połączenia elektrycznego (uziemienia) z wtyczki. Stosując urządzenie Cooktop nie wolno używać złącza pośredniego ani przedłużacza.

OSTRZEŻENIE: Niewłaściwe uziemienie wtyczki może spowodować porażenie prądem elektrycznym. W przypadku wątpliwości dotyczących instrukcji uziemienia należy skontaktować się z wykwalifikowanym elektrykiem.

Przed rozpoczęciem używania:
Należy sprawdzić, czy przewód zasilania jest pewnie przymocowany do modułu CookTek PRZED podłączeniem urządzenia do gniazdka zasilania i przed rozpoczęciem jego używania.

- Nie dotykać płyty ceramicznej (lub wierzchniej części urządzenia Cooktop) bezpośrednio po zakończeniu jego używania. Wysoka temperatura patelni może przenosić się na płytę ceramiczną, stwarzając możliwość oparzenia w przypadku jej dotknięcia.
- Obsługa serwisowa tego produktu może być prowadzona jedynie przez upoważnionego pracownika serwisu lub przez personel firmy CookTek. Nie podejmować samodzielnej próby otwarcia urządzenia ani nie wykonywać żadnych napraw. Aby uzyskać informacje dotyczące obsługi serwisowej, należy skontaktować się z firmą CookTek pod numerem 1-312-563-9600.
- Niniejsze urządzenie wymaga uziemienia. Podłączać jedynie do właściwie uziemionego gniazda. Przed użyciem należy przeczytać instrukcję dotyczącą uziemienia oraz część „Wymogi instalacji elektrycznej" na stronie 3 niniejszej ulotki. Nie używać przedłużacza.

PORTUGUESE

Antes de funcionar com o seu Cooktop, faça o seguinte:
- Retire todo o material de embalagem.
- Coloque a unidade numa superfície seca, nivelada, rígida, estável e não inflamável.
- Mantenha a unidade afastada de outras fontes de calor e deixe um espaço de pelo menos 5 cm nos lados, frente e traseira da unidade, para circulação do ar.

Para sua segurança, nunca corte, retire nem desactive a ligação eléctrica (terra) da ficha. Nunca utilize uma ficha adaptadora nem cabo de extensão com o Cooktop.

ADVERTÊNCIA: Uma ficha incorrectamente ligada à terra pode provocar choque eléctrico. Se tiver alguma questão sobre estas instruções de ligação à terra, por favor consulte um electricista qualificado.

Antes de Começar:
Por favor, certifique-se de que este cabo de energia está ligado firmemente à sua unidade CookTek ANTES de ligar a unidade à tomada de energia e antes de tentar funcionar com ela.

INSTALLATION GUIDELINES FOR A

Please follow the listed guidelines below to

Spacing Requirements:
- All units require a minimum clearance of tw on all four sides.
- All drop-in units require a minimum clearan six (6) inches or fifteen (15) centimeters. allowing for the flow of cool air (ambient te to the cooktop/wok housing intake vents.
  - The six inches can be reduced if add provide forced ventilation.
- Avoid installing the unit near other equipm that can be pulled into the CookTek unit by
- Avoid placing the unit near items that gene pulled into the CookTek unit by its fan (i.e. dishwashers, etc.).

Electrical Requirements:
- Line voltage should never exceed 264VAC 120VAC units.
- Always provide a dedicated electrical circu
- Never use an extension cord or power stri

General Maintenance:
- If your unit comes equipped with a grease read the section on cleaning and maintena
- All units should be checked for build up ar exhaust vents on the bottom of the unit.
- If debris is found on the vents, you should debris with a dry cloth to ensure proper air

Air Flow and Ambient Temperature:
- Avoid ambient temperatures exceeding **50**
- Units dropped into the counter will require
  - Single units require a minimum 70CFM
  - Double units require a minimum of 140C

General:
- Never leave an empty pan on the unit.
- Always turn the unit off when not in use.

INSTALATION OF DROP-IN C

- When installing the drop-in cooktop or wok manual to trace the cutout dimensions ont
- Be sure to allow for a minimum clearance centimeters between all sides of the housi six (6) inches or fifteen (15) centimeters be any surface or obstacle. The space must cool air (ambient temperature not to excee housing intake vents.
- Cut out and drill holes as required in count
- Drill holes for control box mounting.

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

- When installing the drop-in cooktop or wok, apply a bead of an NSF Standard 51 approved sealant (such as Dow Corning 732 Multi-Purpose Sealant or GE RTV 108) around all four edges of the countertop cutout. Carefully follow sealant manufacturer's instructions to insure proper adhesion.
- Locate cooktop or wok over countertop cutout. Pass control panel and cord through the cutout, then pass the base of the cooktop or wok through the hole until flange rests on the countertop.
- Mount control panel using screws supplied. Mounting options are illustrated in the attached drawing.
- Plug cooktop or wok into a grounded 120V or 200-240V (depending on the model purchased), single-phase receptacle. Check rating plate on the cooktop or wok to verify correct voltage. **NOTE: For proper operation, a dedicated circuit should be used for each unit installed. Each circuit should be protected with a 20 amp minimum circuit breaker. For best operation, the counter should have an opening near the unit for fresh air to circulate underneath.**

APPROVED FOR COMMERCIAL USE

CookTek cooktops have been tested to be in conformance with UL 197 and CSA C22.2 standards and bear the commercially rated approvals. CookTek's cooktops have been tested to be in conformance with the European Economic Area standards and bear the CE marking signifying European Conformity.

Your CookTek Cooktop has two different cooking modes: Temperature Mode and Power Cook. Professional cooks will appreciate the special features and advantages of each mode.

COOKING BY POWER COOK (WATTAGE)*

General Operation:

Plug cooktop into a grounded, single-phase receptacle. Models will run on 100-120VAC drawing up to 1800W depending on model, or on 200-240VAC drawing a maximum of 3500W depending on model. Check rating plate on unit to erify correct voltage and wattage. Voltages below 120VAC or 240VAC can result in less than rated power and slower heating times.

NOTE: For proper operaton, an independent dedicated circuit should be used for each unit installed. Each circuit should be protected with a 20 amp circuit breaker. When your application requires high intense heat or you want a quick temperature increase, the Power mode should be used.

What to Do:

- Turn the cooktop "ON" by turning the control knob to the right.
- Momentarily depress the Power Cook button.
- Turn the control knob until the desired Power Cook setting (1-20) appears on the LED display.
- Turn the control knob to the left to decrease power and to the right to increase power.
- To turn the cooktop or wok off, turn the control knob to the far left until it "clicks" and the LED display no longer illuminates.

IMPORTANT: You can switch between Temperature Mode and Power Cook at any time just by pressing the Temperature/Power Cook button (cooktops only).

- Questo prodotto può essere riparato esclu
o dal centro di assistenza CookTek. Non t
interventi di manutenzione di alcun tipo. P
contattare la CookTek al numero 1-312-56
- Questo apparecchio deve essere collegat
una presa elettrica dotata di messa a terra
leggere le istruzioni di messa a terra e i R
pagina 3 di questo opuscolo. Non utilizzar

NORWEGI

Før du bruker komfyren, må du gjøre følgende
- Fjern all emballasje.
- Plasser enheten på et tørt, jevnt, hardt, sta
- Hold enheten unna andre varmekilder, og
luftventilasjon på sidene, foran og på baks

For din egen sikkerhet må du ikke kutte, fjerne
(jordede) koplingen fra kontakten. Ikke bruk e
for komfyren.

**ADVARSEL: Elektrisk støt kan oppstå fra k
Ta kontakt med en kvalifisert elektriker der
jordingsinstruksene.**
Før du begynner:

Kontroller at strømkabelen er satt helt inn i Co
enheten til stikkontakten og før bruk.

- Den keramiske platen (eller overflaten på
umiddelbart etter bruk. Varme fra kjeler vil
gjøre den varm.
- Dette produktet kan bare repareres av en
CookTek-ansatte. Ikke prøv å åpne enhete
slag. For serviceinformasjon, kontakt Cook
- Dette produktet må jordes. Må kun koples
bør du lese jordingsinstruksene og kraven
denne veiledningen. Ikke bruk skjøteledni

POLISH

Przed rozpoczęciem używania urządzenia Co
czynności:
- Usunąć wszystkie elementy opakowania.
- Ustawić urządzenie na suchej, poziomej, t
powierzchni.
- Ustawić urządzenie z dala od innych źródeł
wolną przestrzeń, co najmniej 0,5 cm, aby

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

ΠΡΟΕΙΔΟΠΟΙΗΣΗ: Ένα εσφαλμένα γειωμένο φις μπορεί να έχει ως αποτέλεσμα την ηλεκτροπληξία. Παρακαλείστε να συμβουλευτείτε αρμόδιο ηλεκτρολόγο εάν έχετε τυχόν ερωτήσεις σχετικά με αυτές τις οδηγίες γείωσης.

Πριν ξεκινήσετε:
Βεβαιωθείτε ότι αυτό το ηλεκτρικό καλώδιο είναι σταθερά συνδεδεμένο στη μονάδα CookTek σας ΠΡΙΝ συνδέσετε το φις της μονάδας σε ηλεκτρική πρίζα και πριν προσπαθήσετε να θέσετε τη μονάδα σε λειτουργία.

- Μην αγγίξετε την κεραμική πλάκα (ή το άνω μέρος του Cooktop) αμέσως μετά τη χρήση. Η θερμότητα από την κοιλότητα θα μεταφερθεί στην κεραμική πλάκα. Ως εκ τούτου, αυτή θα είναι πολύ ζεστή για να την αγγίξετε.
- Οι εργασίες επισκευής του προϊόντος αυτού πρέπει να πραγματοποιούνται μόνο από εξουσιοδοτημένο αντιπρόσωπο επισκευών ή από προσωπικό της CookTek. Μην επιχειρήσετε να ανοίξετε τη μονάδα ή να εκτελέσετε οποιαδήποτε εργασία επισκευής σε αυτήν. Για πληροφορίες σχετικά με τις επισκευές, επικοινωνήστε με την CookTek στον τηλεφωνικό αριθμό 1-312-563-9600.
- Η συσκευή αυτή πρέπει να είναι γειωμένη. Συνδέστε μόνο σε σωστά γειωμένη πρίζα. Πριν τη λειτουργία, διαβάστε τις οδηγίες γείωσης και τις απαιτήσεις ηλεκτρικής εγκατάστασης στη σελίδα 3 του παρόντος φυλλαδίου. Μη χρησιμοποιείτε καλώδιο προέκτασης (μπαλαντέζα).

ITALIAN

Prima di mettere in funzione il piano cottura, eseguire le seguenti operazioni:
- Rimuovere tutto il materiale di imballaggio.
- Collocare l'unità su una superficie asciutta, piana, rigida, stabile e non infiammabile.
- Tenere l'unità lontana da altre fonti di calore e lasciare almeno 5 centimetri di spazio per consentire la circolazione dell'aria tutto intorno all'unità.

Per la propria sicurezza, non tagliare, rimuovere o disattivare mai il collegamento elettrico di terra dalla spina. Non utilizzare mai una spina adattatore o un cavo elettrico di prolunga per collegare il piano cottura.

AVVERTENZA: una spina elettrica non correttamente collegata all'impianto di terra può provocare scosse elettriche. Rivolgersi a un elettricista qualificato in caso di domande su queste istruzioni di messa a terra.

Prima di iniziare:
Assicurarsi che questo cavo di alimentazione sia collegato saldamente all'unità CookTek PRIMA di collegare l'unità alla presa elettrica e prima di metterla in funzione.

- Non toccare la piastra di ceramica (o la superficie del piano cottura) subito dopo l'uso. Il calore della pentola si trasferisce alla piastra di ceramica, rendendola estremamente calda.

COOKING IN TEMPERATURE M

When your recipe requires a precise and ever
period of time, the Temperature Mode is ideal
What to do:
- Turn the cooktop “ON” by turning the contr
- Place cookware containing ingredients on
- Depress the Temperature Mode button.
- Turn the control knob until the desired coo
Display. The temperature displayed will ch
measured temperature 3 seconds after the
show the measured temperature until the
- To turn the cooktop off, turn the control kn
LED display is no longer illuminated.

NOTE: If the unit is left on and has been left u
without a pan on its surface, the unit will enter
You will know that the unit is in “Sleep Mode”
horizontal dashes. The Power Knob must be
“Sleep Mode” and begin normal operation.

**Temperature Mode monitors the temperatu
actual temperature of the food contents, a
used.**

GLASS BOWL W

Wok operation is similar to the standard cookt
differences.
- On wok units, as with cooktop units, after
that the internal cooling fan will continue to
perfectly normal and should not be a matte
- The Control Knob on the wok unit is used
will indicate a setting ranging from 1 (lowe
- DO NOT leave any unattended pan on the
- Make sure that you turn the wok off when
- DO NOT place an empty pan on the wok.
pan and the unit and may cause damage t
- **This wok unit is intended for use with 1**
Use of smaller pans may result in frequent
precautionary shutdown.

CARE & CLEA

Your CookTek Induction Cooktop is easy to ke
easy instructions:
- Turn the unit OFF and remove the plug fro
- When the unit is cool, wipe the surface an
scouring agent on the stainless steel hous
Friend for greasy or resistant soiling. Do n
an oven cleaner, as it may damage the co
- To clean the glass surface, use a mild dete
cream.
- Never immerse the cooktop in water or pu

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

IMPORTANT INFORMATION

- Never heat an empty pan. It may damage the cooktop or cookware and overheat the unit. When overheating occurs, an error code will flash on the LED display and the cooktop will shut itself off automatically. When the temperature returns to normal, the Cooktop will start to cook again.
- Remember to turn the cooktop off after each use.
- Keep the cooktop away from gas and electric ranges or open flames. Do not place in the oven. If the surrounding air temperature is too high, the cooktop will cease to function properly.
- Be sure to dry off the outside of the pan before use. Otherwise, as the pan temperature rises, the water droplets on the outside of the pan may begin to boil and spatter.
- Do not touch the ceramic plate (or the top of the cooktop) immediately after use. The heat from the pan will be transferred to the ceramic plate causing it to be hot to the touch.
- Do not place any articles on the cooktop other than inductive cookware. For example, do not place cans on top of the cooktop as they may explode.
- Do not use auminum foil on top of the cooktop.
- Do not use the cooktop near a fauct, swimming pool, sink, or other areas where water can be found. Never store the cooktop outside or upside down.
- Do not obstruct, block, or alter the air entrance or outlet. Do not stick foreign objects into these openings.
- Do not strike or damage the cooktop. Do not put the cooktop in your luggage. Throwing or dropping the cooktop can damage the internal components or crack the cooktop, voiding your warranty. If the cooktop becomes cracked, unplug the unit immedately and do not use it.

GREASE FILTER MAINTENANCE

This unit comes equipped with a grease filter(s) to protect the electronics from contaminants.

Grease filter cleaning procedures:

Frequency

- Grease filter(s) should be removed and cleaned every two weeks. More frequent cleaning may be necessary if they appear clogged and/or operate in heavy grease laden environments.

Procedure

- Slide filter(s) outof the track on the bottom of the unit.
- Back flus with hot water to remoe dirt and grease.
- Shake remaining water out and let stand until completely dry.
- Reinstall filter(s) ensuring the arrow on the edge of the filter(s) is ponting into the unit.
- NOTE: filters are also dishwasher safe.

Caution

- Do not operate the unit without the grease filter(s) installed.
- If the unit displays and error code of “E4” - the overheat error - this may indicate a clogged filter. Follow the procedure above and let the unit cool down before resuming operation (turn off for approximately 5 minutes).

GERMA

Vor Inbetriebnahme des Cooktop verfahren Si

- Entfernen Sie das gesamte Verpackungsm
- Stellen Sie das Gerät auf eine trockene, e brennbare Fläche.
- Halten Sie das Gerät von anderen Wärme Gerät herum (vorne, hinten und seitlich) m frei.

Zu Ihrer eigenen Sicherheit darf das Erdungsk abgetrennt, entfernt oder in schadhaftem Zust für Ihren Cooktop niemals einen Steckeradap

WARNHINWEIS: Ein nicht fachgemäß geer Stromschlag führen. Falls Sie noch Fragen Zusammenhang mit Schutzkontakt und Er an einen Elektrofachmann.

Bevor Sie beginnen:

Dieses Netzkabel muss fest mit dem CookTek Gerät an die Steckdose anschließen und es ir

- Berühren Sie die Keramikplatte (oder Obe unmittelbar nach Gebrauch. Die Hitze der Keramikplatte, die dann ebenfalls heiß wir
- Dieses Produkt darf nur durch bevollmäch Fachpersonal von CookTek gewartet werd zu öffnen und selbst zu warten. Nähere In bei CookTek unter der Rufnummer 1-312-
- Das Gerät muss geerdet werden. Der Ste geerdete Steckdose gesteckt werden. Vor Anweisungen zu Schutzkontakt/Erdung ur elektrische Installation auf Seite 3 dieses H Verlängerungskabel.

GREEK

Πριν θέσετε το Cooktop σας σε λειτουργία, εκ

- Αφαιρέστε όλα τα υλικά συσκευασίας.
- Τοποθετήστε τη μονάδα σε μια στεγνή, επ εύφλεκτη επιφάνεια.
- Διατηρήστε τη μονάδα μακριά από άλλες τ τουλάχιστον 2 ίντσες (5 εκατοστά) για την μπροστινό μέρος και το πίσω μέρος της μ

Για την ασφάλειά σας, ποτέ μην κόψετε, αφαιρ ηλεκτρική (γείωση) σύνδεση από το φις. Μη χ φις ή καλώδιο προέκτασης (μπαλαντέζα) με τ

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

Ennen kuin aloitat:
Varmista, että tämä virtajohto on tiukasti kiinnitetty CookTek:iin ENNEN laitteen pistokkeen työntämistä pistorasiaan ja ennen käyttökokeilua.

- Älä koske keraamista levyä (keittotason päällä) heti käytön jälkeen. Astian kuumuus siirtyy keraamiseen levyyn kuumentaen sen liian kuumaksi koskettaa.
- Tätä tuotetta saa huoltaa ainoastaan valtuutettu huoltopiste tai CookTekin henkilökunta. Älä yritä avata laitetta ja suorittaa sille minkäänlaisia huoltotoimia. Tietoja huollosta saat soittamalla CookTekiin numeroon +1-312-563-9600.
- Tämä laite täytyy suojamaadoittaa. Liitä ainoastaan oikein suojamaadoitettuun pistorasiaan. Ennen käyttöä lue maadoitusohjeet ja sähköasennusvaatimukset tämän lehtisen sivulta 3. Älä käytä jatkojohtoa.

FRENCH

Avant d'utiliser l'appareil Cooktop, effectuer les opérations suivantes :
- Retirer tous les matériaux d'emballage.
- Placer l'appareil sur une surface sèche, plane, solide, stable et non inflammable.
- Placer l'appareil à distance de toute autre sources de chaleur et laisser un espace libre d'au moins 5 cm (2 pouces) des deux côtés, à l'avant et à l'arrière de celui-ci pour permettre la circulation de l'air.

Pour votre sécurité, ne jamais couper, déconnecter ou désactiver le raccordement électrique (terre) de la prise de courant. Ne jamais utiliser un adaptateur ou une rallonge électrique avec l'appareil Cooktop.

MISE EN GARDE : Une prise de courant incorrectement raccordée à la terre engendre un risque de choc électrique. Pour toute question concernant ces instructions de mise à la terre, consulter un électricien qualifié.

Avant de commencer :
S'assurer que le câble d'alimentation est solidement fixé à l'appareil CookTek AVANT de raccorder l'appareil à une prise de courant et d'essayer de le faire fonctionner.

- Ne pas toucher la plaque de céramique (ou la partie supérieure de l'appareil Cooktop) immédiatement après utilisation. La chaleur de la casserole se transmet à la plaque de céramique, aussi celle-ci est chaude au toucher.
- L'entretien de cet appareil ne peut être effectué que par un réparateur agréé ou par un membre du personnel de CookTek. Ne jamais essayer d'ouvrir l'appareil ni de le réparer. Pour des informations concernant l'entretien, contacter CookTek au +1-312-563-9600.
- Cet appareil doit être raccordé à la terre. Le brancher exclusivement à une prise de courant correctement raccordée à la terre. Avant utilisation, lire les instructions de raccordement à la terre, ainsi que les exigences en matière d'installation électrique figurant à la page 3 du présent manuel. Ne pas utiliser de câble de rallonge.

IMPORTANT SAFETY

There are certain safeguards that should alwa
appliance is used:
- To reduce the risk of fire, electric shock, o
all instructions.
- Never immerse cords, plugs, or appliance
- Supervise carefully when appliance is use
from appliance when in operation.
- Always unplug appliance immediately afte
handling, transporting, or storing.
- Do not use any appliance that has a dama
malfunctioned or been damaged. Consult
for service.
- Do not use any accessories or attachment
manufacturer. Use of unaproved accesso
warranty.
- The pan on the appliance will heat continu
The pan will be hot and caution should be
the appliance.
- Do not let the power cord touch hot surfac
counter. Do not move the appliance with
- Do not move the appliance while a hot pa
top of the appliance.
- To disconnect the appliance, turn the cont
"click." You may then remove the plug fro
- Do not use the CookTek Induction Cookto
use as described in this manual. This unit
and is not intened for laboratory or industr
- Do not put food or unopened cans on the
- This product may only be serviced by an a
CookTek personnel. Do not attempt to op
kind. For service information, contact Coo
- This appliance must be grounded. Conne
Before operating, read grounding instructi
Requirements on page 2 of this manual.
- Do not overcook food or leave appliance u
- In the unlikely event of a grease fire, smot
tight-fitting lid, cookie sheet, or flat tray.
under control, turn off appliance and unplu
- Use only with induction compatible and eff
- Place cooktop on a level, hard, stable, nor

TWO HOB (TWO BURN

Operation of the two hob (two burner) cooktop
position cooktop. Each position wil have its o
Control Knob and its own, separately controlle
It is not necessary to turn both positions on fo
**NOTE: For proper operation, a dedicated c
installed. Each unit should be protected w**

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

TROUBLESHOOTING

Symptom	Probable Cause	Possible Solution
No power (No lights or fan noise)	• Unit unplugged • No power to receptacle	• Plug unit into appropriate receptacle • Make sure that receptacle is energized • Check wall switches • Check circuit breaker • Plug a different electronic device into the receptacle to make sure that power is present
Pan does not heat	• Pan is not induction efficient • Pan diameter is less than 7 inches • Pan not centered over cooktop logo	• Use induction efficient pan • Use a larger induction efficient pan • Center pan
Cooktop suddenly stops heating	• Possible power brown out • Circuit shared with another electrical device • Air vents blocked or insufficient air circulation • Safety shut-off engaged	• Assure proper voltage/power levels • Make sure the cooktop is not sharing a circuit with other electrical devices • Check air vents to make sure that they are not blocked. Make sure that there is sufficient air flow around the appliance. • The safety shut-off will engage if an empty pan is left on the cooktop surface while the unit is working at full power. Make sure that the cooktop surfacce is clear. Wait 15-20 minutes for the unit to reset.
Pan does not get hot enough even though power levels are set to maximum - induction efficient pan in use	• Extension cord in use • Circuit shared with another electrical device	• DO NOT use extension cords. Extension cords may affect the power levels reaching the appliance. • Make sure that the cooktop is not sharing a circuit with other electrical devices.
Pan cooks unevenly, does not maintain heat level, or overheats	• Pan is not induction efficient • Pan bottom may not be flat enough • Pan not centered over cooktop logo • Pan diameter is less than 7 inches	• Use induction efficient pan • Use flatter pan • Center pan • Use a larger induction efficient pan

MANUAL TRANSLATIO

DUTCH

Doe het volgende voordat u uw kooktop gaat
- Verwijder al het verpakkingsmateriaal
- Zet het toestel op een droge, vlakke, hard ondergrond
- Houd het toestel uit de buurt van andere w voor- en achterkant en de zijkanten minste

Voor uw veiligheid mag u nooit de elektrische snijden, verwijderen of uitschakelen. Gebruik verlengsnoer met de kooktop.

WAARSCHUWING: Een verkeerd geaarde s bezorgen. Raadpleeg een erkende elektrici aardingsinstructies.

Voordat u begint:
Controleer eerst of dit snoer stevig aan uw Co DAT u de stekker van het toestel in het stopco bruiken.
- Raak de keramische plaat (of de bovenka na gebruik aan. De hitte van de pan wordt zodat deze heet is bij aanraking.
- Dit product mag uitsluitend worden gerepa servicebedrijf of door personeel van Cook te maken of op enige wijze te repareren. N en reparatie contact op met CookTek op 0
- Dit toestel moet worden geaard. Alleen aa stopcontact. Lees voor het gebruik de aard de elektrische aansluiting op pagina 3 van verlengsnoer.

FINNISH

Ennen keittotason käyttöä toimi seuraavasti:
- Poista kaikki pakkausmateriaalit.
- Laita laite kuivalle, tasaiselle, kovalle, tuke
- Pidä laite erossa muista lämmönlähteistä j vähintään 10 cm (2 tuumaa) vapaa tilaa il

Turvallisuussyistä älä koskaan leikkaa, irrota t htoa) pistokkeesta. Älä koskaan käytä keittota johtoa.

VAROITUS: Väärin maadoitettu pistoke voi valtuutetun sähköasentajan kanssa, jos si tusohjeista.

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

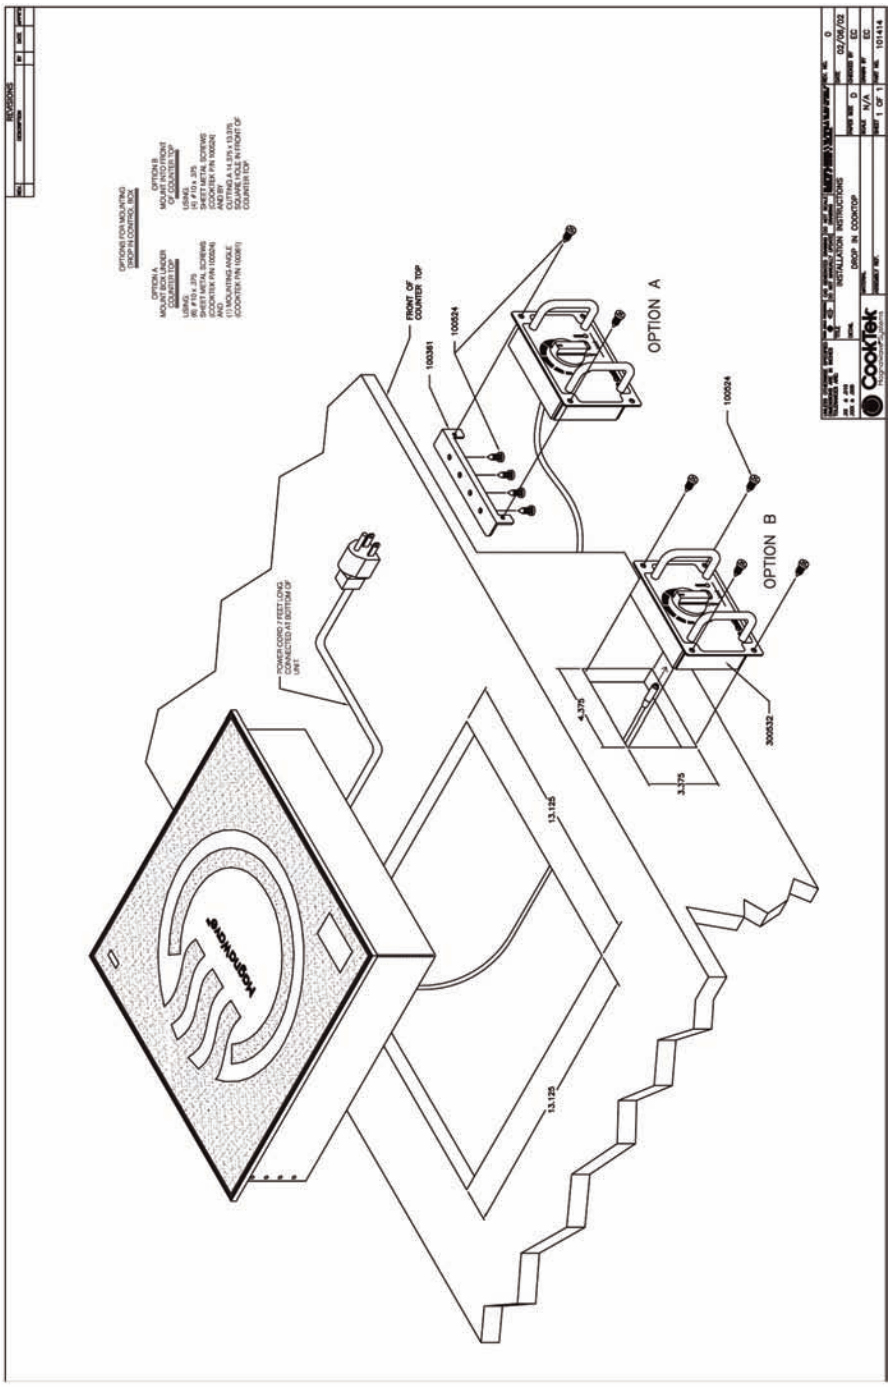

ERROR

In the event of a possible malfunction, your C
Code on the LED display and the unit will bee
error. Please consult the following table when
reset the error conditions, remove the pan fro
button or unplug the unit.

Error	Error Description	Potential Cause
1	RTD (temperature sensor) is malfunctioning	RTD sensor has s
2	RTD (temperature sensor) temperature is too high.	Glass surface is to or RTD sensor has broken.
3	Current is too high	Possible mechanic damage to coil or object on cooktop.
4	Electronics are overheating	Fan is broken, bac ventilation, ambien temperature too h
6	Input line (from power outlet) voltage too high	Something else is same circuit. Line voltage fluctuation end or beginning o day. (Voltage > 13 for 120V model or >264VAC for 240V model)
7	Harware failure	Inverter I/O proble
8	Zero cross error	Bad AC source, bo component failure
16	System error	CPU I/O problem

WARRANTY STA

All commercial cooking and holding equipmen
warranted against defects in materials and wo
from the date of shipment from CookTek's fac
such as pans, bags, and pellet assemblies are
materials and workmanship for a period of 90
CookTek's factory.

Total Restaurant Supply - https://totalsupply1.com - Toll Free 1-800-944-9304 - Local 507-288-9454
2940 Hwy 14 W, Rochester, MN 55901

IMPORTANT! A valid proof of purchase, and Serial Number (s) showing date of purchase is required to obtain Warranty Service.

This warranty is for the benefit of the original purchaser and is non-transferable. Any defects in materials or workmanship, which are brought to the attention of CookTek by written notification within the aforesaid warranty period will be repaired or replaced, at CookTek's discretion, with new or recertified products or parts. THIS IS THE SOLE REMEDY FOR ANY BREACH OF THIS WARRANTY. IN NO EVENT WILL COOKTEK BE LIABLE FOR DAMAGES OF ANY KIND, WHETHER DIRECT OR INDIRECT, SPECIAL OR CONSEQUENTIAL. THIS WARRANTY IS THE COMPLETE AND ONLY WARRANTY, EXPRESS OR IMPLIED IN LAW OR FACT, INCLUDING BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, SUITABILITY, QUALITY, OR FITNESS FOR ANY PARTICULAR PURPOSE. **THIS WARRANTY DOES NOT INCLUDE ANY THIRD PARTY INSTALLATION, REMOVAL OR DAMAGE COSTS including (but not limited to) LABOR, MATERIALS AND TRAVEL FOR CAULKING IN DROP-IN ("BUILT-IN") UNITS, OR REPAIRS / REPLACEMENT OF FUSES, BREAKERS, MILLWORK AND / OR COUNTER-TOPS).**

This warranty is void if it is determined that upon inspection by CookTek or one its Authorized International Distributor s that the equipment has been modified, misused, misapplied, improperly installed, or damaged in transit or by fire, flood or act of God. Broken Glass-Ceramic tops are considered abuse and are NOT covered. Warranty will be considered void if the serial nameplate has been removed or defaced or if the unit has been opened or modified in any way or service has been attempted by unauthorized personnel.

The prices charged by CookTek for its products are based upon the limitations in this warranty. Seller's obligation under this warranty is limited to the repair of covered defects without charge by CookTek or one of its Authorized International Distributors

This warranty is valid in the continental United States of America (USA) and Canada only. It is valid only if purchased through an authorized Cooktek Representative or Dealer. To receive Warranty Service in the USA, please call CookTek's Customer Service Department at 1 (888) 266-5835, or (312) 563-9600. A Returns Authorization (RA) number will be issued along with instructions for returning goods for service (or their replacement). The RA number must be written clearly or printed on the outside of the return shipping container, or on the address label when returning units for service. Units received without an RA number will be refused at our shipping dock and may encounter a delay in service. Units must be taken or shipped to the factory with transportation charges prepaid for service. CookTek will provide return freight. If instead, the unit(s) is handled under CookTek's Advanced Replacement Program (ARP), CookTek will pay for shipping both ways, but the unit(s) being replaced must be returned. Instructions and alternate courses of action will be provided by Customer Service. Please save all packaging materials for possible use in shipping. CookTek assumes no liabilities whatsoever for any damages incurred in transit. PLEASE BE SURE TO USE

(continued...)

ADEQUATE PACKAGING AND A RELIABLE
THE ARP PROGRAM, USE THE SAME BOX
ARRIVED IN FOR THE RETURN.

OUTSIDE THE USA AND CANADA

CookTek offers NO warranty outside of the
offered and performed at the discretion of Coo
Distributor. Contact details can be found at w
+1 (312) 563-9600.

For additional information and other details co
Customer Service Department at:

CookTek Induction Systems, LLC • www.cook
In the USA, Tel: (888) COOKTEK, 1 (888) 266
Outside the USA, Tel: +1 (312) 563-9600 • Fa

DROP-IN U